



Złącze proste
Coupler - straight

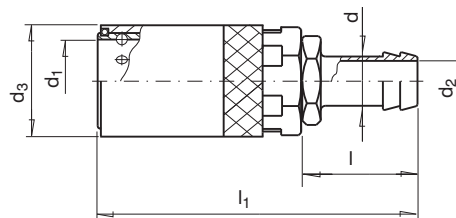

Z zaworem
With valve




 Bez zaworu
Without valve



NR KAT.	NR KAT.	NW	d	d ₂	d ₃	d ₁	l	l ₁
HVK 6-06	HK 6-06	6	6 1/4"	4,5	17	9	20	51
HVK 6-08	HK 6-08		8 5/16"	6	17	9	20	51
HVK 6-09	HK 6-09		9 5/14"	6	17	9	20	51
HVK 6-10	HK 6-10		10 3/8"	6	17	9	20	51
HVK 9-10	HK 9-10	9	10 3/8"	8,5	23	13	27	68
HVK 9-11	HK 9-11		11 7/16"	9	23	13	27	68
HVK 9-13	HK 9-13		13 1/2"	10	23	13	27	68
HVK 16-13	HK 16-13	16	13 1/2"	10	30	20	37	94
HVK 16-20	HK 16-20		20 3/4"	16	30	20	37	94


Złącze kątowe - 45°
Coupler - angle 45°

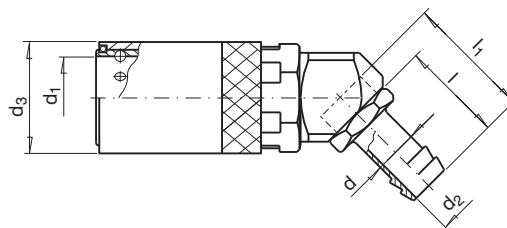

Z zaworem
With valve



 Bez zaworu
Without valve



NR KAT.	NR KAT.	NW	d	d ₂	d ₃	d ₁	l	l ₁
HVK 6-06-45°	HK 6-06-45°	6	6 1/4"	4,5	18	9	20	25
HVK 6-08-45°	HK 6-08-45°		8 5/16"	6	18	9	20	25
HVK 6-09-45°	HK 6-09-45°		9 5/14"	6	18	9	20	25
HVK 6-10-45°	HK 6-10-45°		10 3/8"	6	18	9	20	25
HVK 9-10-45°	HK 9-10-45°	9	10 3/8"	8,5	23	13	27	38
HVK 9-11-45°	HK 9-11-45°		11 7/16"	9	23	13	27	38
HVK 9-13-45°	HK 9-13-45°		13 1/2"	10	23	13	27	38
HVK 16-13-45°	HK 16-13-45°	16	13 1/2"	10	30	20	46	67
HVK 16-20-45°	HK 16-20-45°		20 3/4"	16	30	20	46	67